

1


За потреби скиньте налаштування маршрутизатора до заводських з допомогою кнопки RESET або DEFAULT. Сторінка налаштувань та ім'я користувача для входу зазвичай вказані на наклейці на нижній стороні маршрутизатора.



(Зображення наведені для прикладу)

2

Відкрийте сторінку налаштувань та налаштуйте інтернет підключення маршрутизатора як показано на скріншотах нижче:

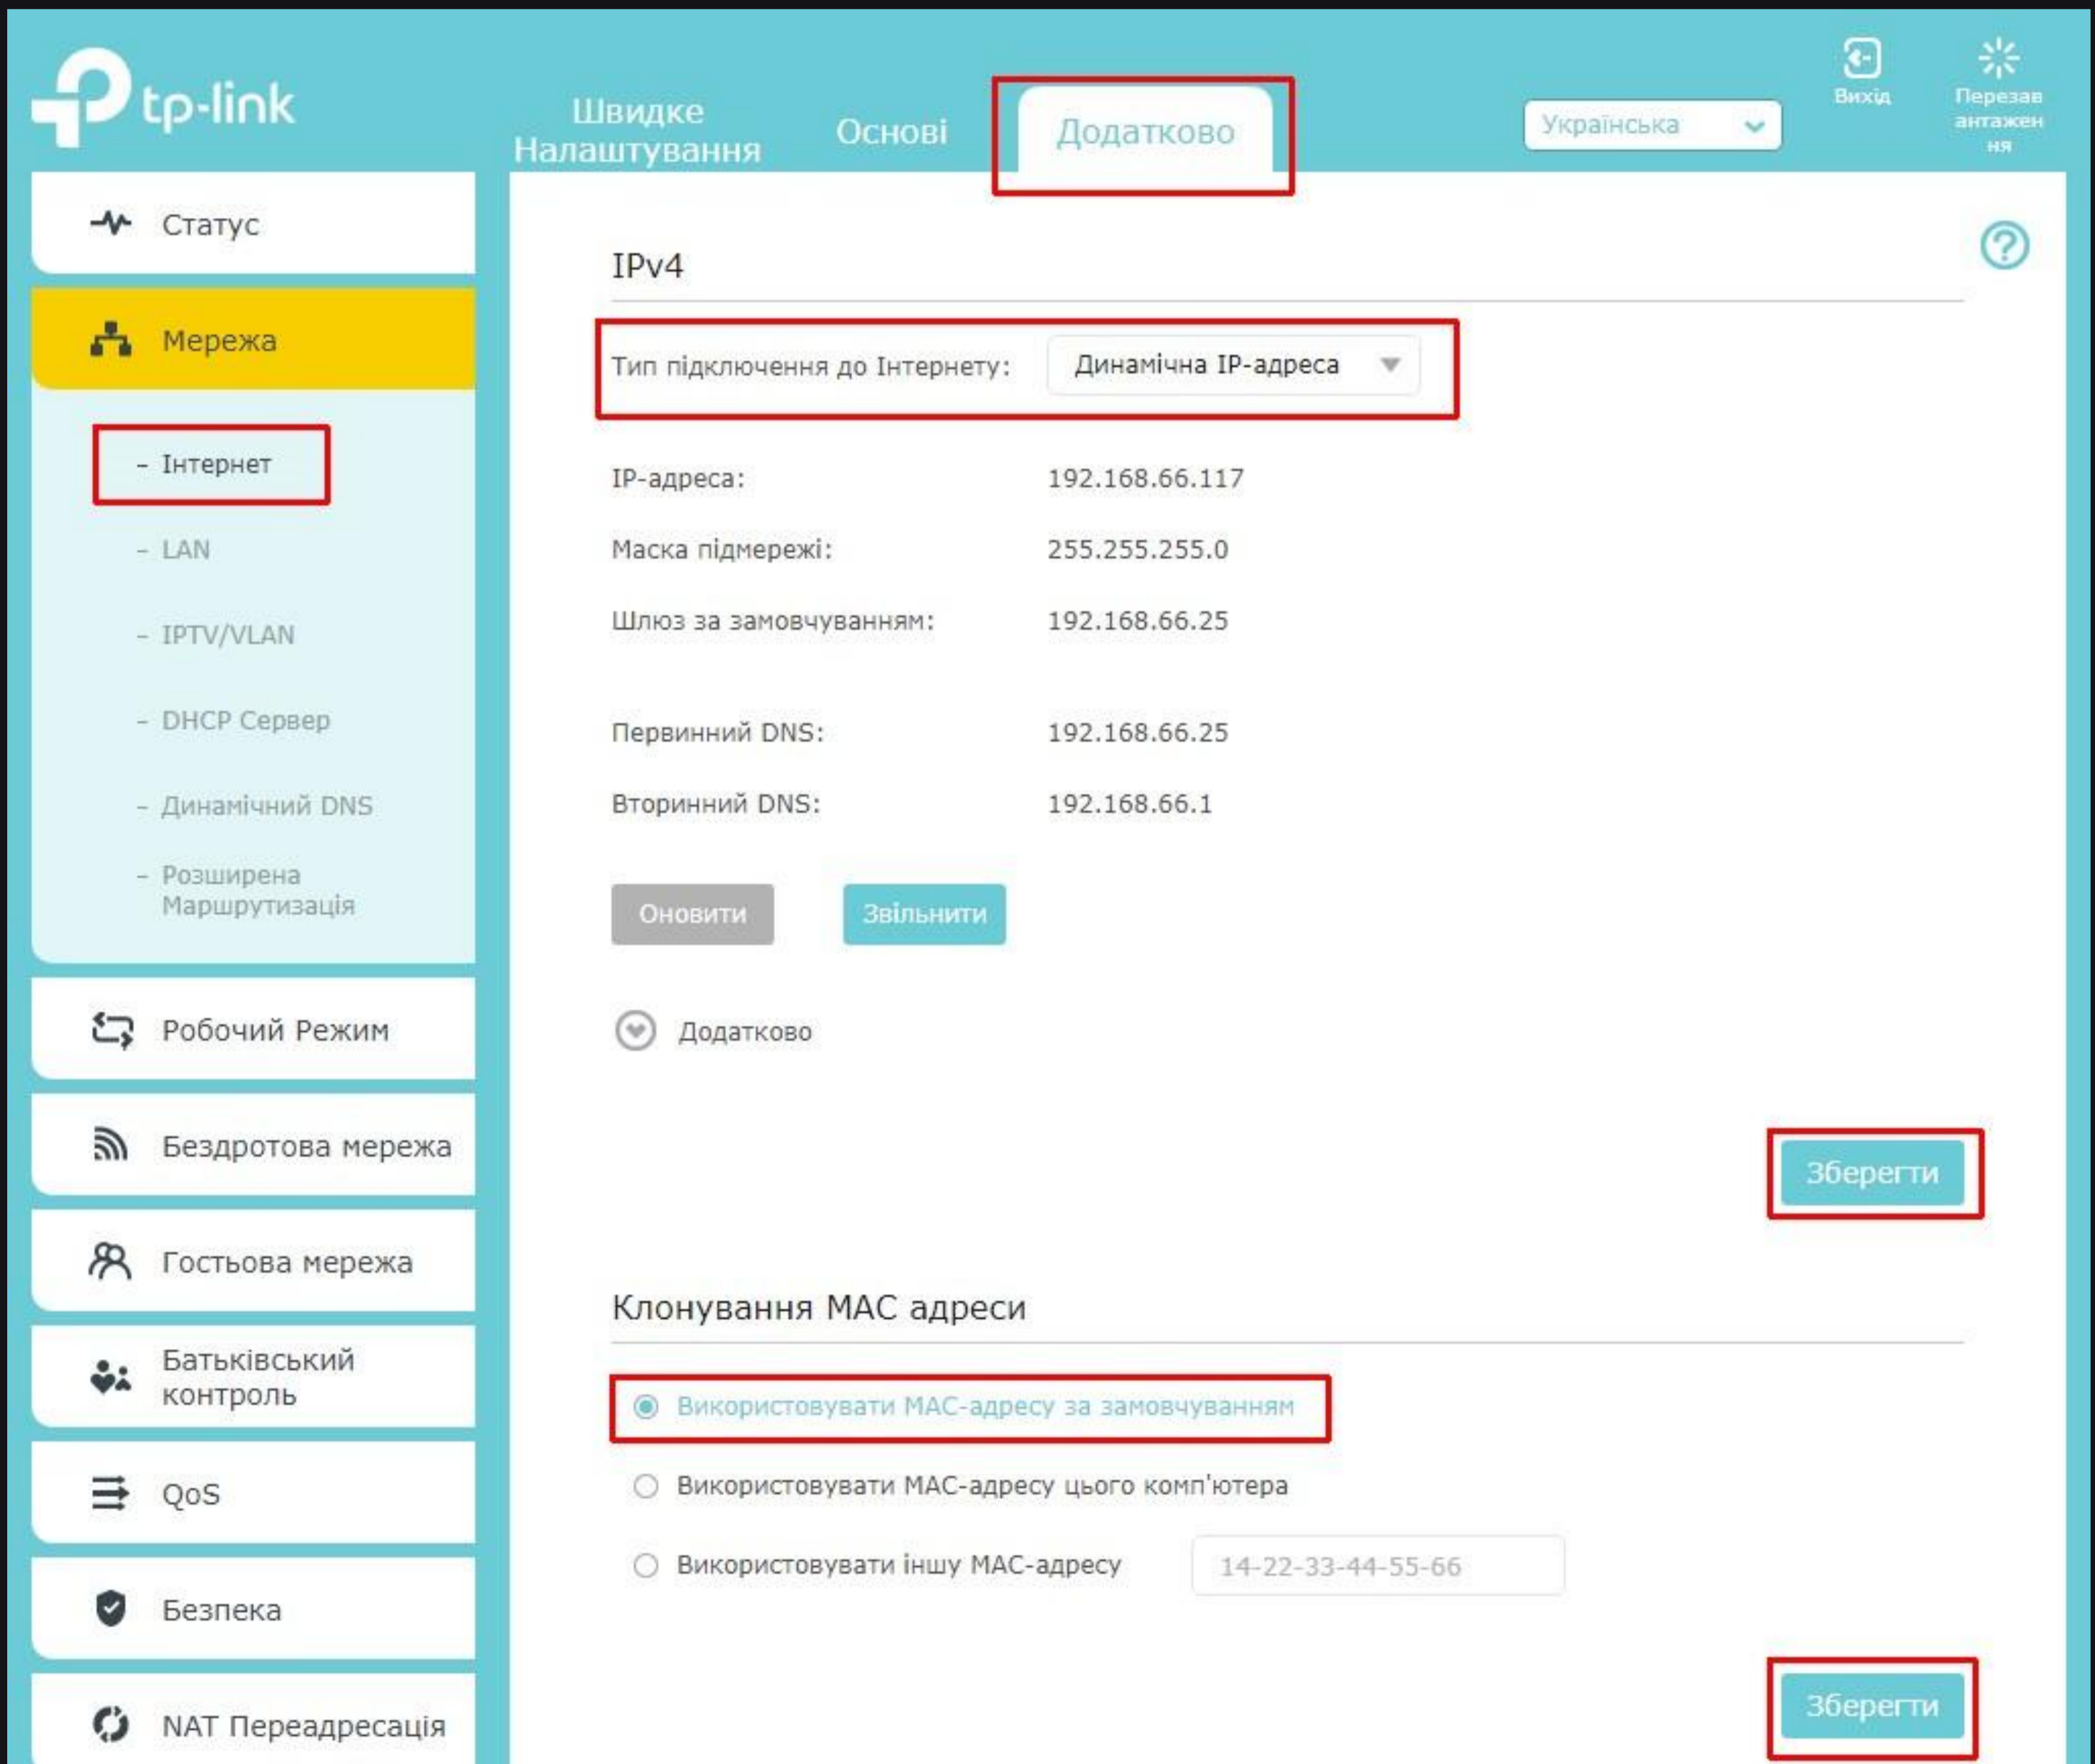

3

Налаштуйте назву WIFI мережі, та пароль до неї

The screenshot shows the 'Додатково' (Advanced) tab of the TP-Link router's web interface. The page title is 'Налаштування Бездротової Мережі' (Wireless Network Settings). The frequency is set to 5 GHz. The SSID is 'TP-Link_593D_5G' and the password is '12345670'. The security mode is WPA / WPA2 - Personal. The mode is 802.11a/n/ac mixed. The power level is set to High. A 'Зберегти' (Save) button is visible at the bottom right.

The screenshot shows the 'Додатково' (Advanced) tab of the TP-Link router's web interface. The page title is 'Налаштування Бездротової Мережі' (Wireless Network Settings). The frequency is set to 2.4 GHz. The SSID is 'TP-Link_593D' and the password is '12345670'. The security mode is WPA / WPA2 - Personal. The mode is 802.11b/g/n mixed. The power level is set to High. A 'Зберегти' (Save) button is visible at the bottom right.